



KORIMAT KA 240 with 240 litres

Designs: electric, gas-heated and oil-heated

KORIMAT = BOILER + AUTOCLAVE

- 18/10 stainless steel boiler
- microprocessor MP 4 control system
- various control possibilities by specifying:
 - boiler temperature
 - boiling time
 - advance time
 - core temperature
 - F value
 - delta boiling process
- quick safety lock
- immediately active electric radiant heating system
- outstanding all-round insulation, saving energy
- data recorder for recording sterilization protocols



CE tested



Made in Germany



Data recorder for recording sterilization protocols



Sterilization protocol



Sterilizing tinned goods



Quick boiling soups



Vaccum-steaming



KORIMAT

METALLWARENFABRIK GMBH

KORIMAT METALLWARENFABRIK GMBH

ZUM NEULAND 12 · 35708 HAIGER-WEIDELBACH · TEL. 0 27 74/92 39 93 · FAX 0 27 74/9 23 01 91
internet: www.korimat.de · e-mail: info@korimat.de



Plus points:

- two valves for greater safety
- compact construction
- easy to use:
all control elements can be reached from the front
- service-friendly:
all parts are easily accessible
- the smooth surfaces
make cleaning easy
- no over-heating of the material
to be boiled thanks to a boiler
temperature which can be set
precisely
- automatic determination
of the F value even during
the cooling phase
- data recorder, including software,
for recording a sterilization
protocol



KA 240 capacity

Container	For each 1/1 basket	For each 1/3 basket	For each 3 x 1/3 basket
73/58 tin	448	140	420
99/33 tin	480	150	450
99/63 tin	255	70	210
86/70 twist-off jar	240	74	222



KA 240 / 2.5 / Electric


Max. connection
16.5 kW, 400 V
Cut-outs at least 3 x 25 A

KA 240 / 2.5 / Gas

Heat output approx. 21 kW
Gas consumption:
Natural gas approx. 3 m³/h
LNG approx. 1 m³/h
Connection to gas line: 3 / 4 inch

KA 240 / 2.5 / Oil

Heat output approx. 21 kW
Oil consumption approx. 2 kg/h
10 x 1 mm copper pipe

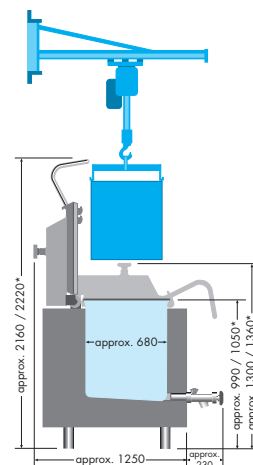

*KA 240 dimensions for gas and oil

18/10 stainless steel accessories

● Lifting bracket for continuous loading basket

Order no.
4200 409



● Continuous loading basket

Internal Ø mm	Height mm	Max. basket vol. litres	Weight kg	Order no.
635	490	155	7,9	4200 406



● 1/3 high loading basket

Internal Ø mm	Height mm	Max. basket vol. litres	Weight kg	Order no.
635	180	57	5,4	4200 400



● Bottom plate

Internal Ø mm	Order no.
670	4200 401



● Compensation ring

Internal Ø mm	Order no.
600	4200 402



KORIMAT

METALLWARENFABRIK GMBH