



# KORIMAT KA 380 with 380 litres

Designs: electric, gas-heated and oil-heated

KORIMAT = BOILER + AUTOCLAVE

- 18/10 stainless steel boiler
- microprocessor MP 4 control system
- various control possibilities by specifying:
  - boiler temperature
  - boiling time
  - advance time
  - core temperature
  - F value
  - delta boiling process
- quick safety lock
- with circulation pump for a better heat distribution
- outstanding all-round insulation, saving energy
- data recorder for recording sterilization protocols



CE tested



Data recorder for recording sterilization protocols



Sterilization protocol



Sterilizing tinning goods



Quick boiling soups



Vacuum-steaming



## KORIMAT

METALLWARENFABRIK GMBH

KORIMAT METALLWARENFABRIK GMBH  
ZUM NEULAND 12 · 35708 HAIGER-WEIDELBACH · TEL. 027 74/92 39 93 · FAX 027 74/9 23 01 91  
E-MAIL: INFO@KORIMAT.DE · INTERNET: WWW.KORIMAT.DE



### Plus points:

- two valves for greater safety
- compact construction
- easy to use:  
all control elements can be reached from the front
- service-friendly:  
all parts are easily accessible
- the smooth surfaces  
make cleaning easy
- no over-heating of the material  
to be boiled thanks to a boiler  
temperature which can be set  
precisely
- automatic determination  
of the F value even during  
the cooling phase
- data recorder, including software,  
for recording a sterilization  
protocol



### KA 380 capacity

Container	For each 1/1 basket	For each 1/2 basket	For each 2 x 1/2 basket
73/58 tin	810	390	780
99/33 tin	860	410	820
99/63 tin	460	215	430
86/70 twist-off jar	430	205	410



### KA 380 / 2,5 / Electric


Max. connection  
25 kW, 400 V  
Cut-outs at least 3 x 50 A

### KA 380 / 2,5 / Gas

Heat output approx. 30 kW  
Gas consumption:  
Natural gas approx. 4,5 m<sup>3</sup>/h  
LNG approx. 1,6 m<sup>3</sup>/h  
Connection to gas line: 3/4 inch

### KA 380 / 2,5 / Oil

Heat output approx. 30 kW  
Oil consumption approx. 3 kg/h  
10 x 1 mm copper pipe

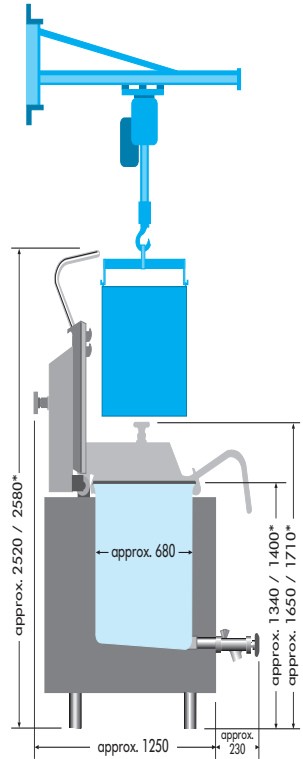

\*KA 380 dimensions for gas and oil

## 18/10 stainless steel accessoires

### ● Lifting bracket for continuous loading basket

Order no.  
**4300 409**



### ● Continuous loading basket

Internal Ø mm	Height mm	Weight kg	Order no.
<b>635</b>	<b>900</b>	<b>14</b>	<b>4300 406</b>



### ● 1/2 high loading basket

Internal Ø mm	Height mm	Weight kg	Order no.
<b>635</b>	<b>440</b>	<b>8,5</b>	<b>4300 404</b>



### ● Bottom plate

Internal Ø mm	Order no.
<b>670</b>	<b>4300 401</b>



### ● Compending ring

Internal Ø mm	Order no.
<b>600</b>	<b>4200 402</b>



# KORIMAT

METALLWARENFABRIK GMBH