



KORIMAT KA 160 with 120 litres

KORIMAT = BOILER + AUTOCLAVE

- 18/10 stainless steel boiler
- microprocessor MP 4 control system
- various control possibilities by specifying:
 - boiler temperature
 - boiling time
 - advance time
 - core temperature
 - F value
 - delta boiling process
- quick safety lock
- immediately active electric radiant heating system
- outstanding all-round insulation, saving energy
- data recorder for recording sterilization protocols



CE tested



Made in Germany



Data recorder for recording sterilization protocols



Sterilization protocol



Sterilizing tinned goods



Quick boiling soups



Vaccum-steaming



KORIMAT

METALLWARENFABRIK GMBH

KORIMAT METALLWARENFABRIK GMBH

ZUM NEULAND 12 · 35708 HAIGER-WEIDELBACH · TEL. 0 27 74/92 39 93 · FAX 0 27 74/9 23 01 91
internet: www.korimat.de · e-mail: info@korimat.de




Plus points:

- two valves for greater safety
- compact construction
- easy to use:
all control elements can be reached from the front
- service-friendly:
all parts are easily accessible
- the smooth surfaces make cleaning easy
- no over-heating of the material to be boiled thanks to a boiler temperature which can be set precisely
- automatic determination of the F value even during the cooling phase
- data recorder, including software, for recording a sterilization protocol



Connection: 400 V three-phase current
Connection value: 9 kW
Excess operating pressure up to 2.5 bar

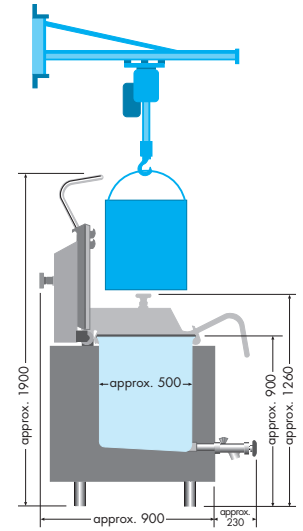

18/10 stainless steel accessories

● Continuous loading basket

Internal Ø mm	Height mm	Max. basket vol. litres	Weight kg	Order no.
460	500	81,5	6,2	4122 406



● 1/3 high loading basket

Internal Ø mm	Height mm	Max. basket vol. litres	Weight kg	Order no.
460	180	30	2,7	4122 400



● Bottom plate with inclination compensation

Internal Ø mm	Order no.
400	4160 401



KA 160 capacity

Container	For each 1/1 basket	For each 1/3 basket	For each 3 x 1/3 basket
73/58 tin	254	78	234
99/33 tin	165	45	135
99/63 tin	100	28	84
86/70 twist-off jar	132	34	115



KORIMAT

METALLWARENFABRIK GMBH